


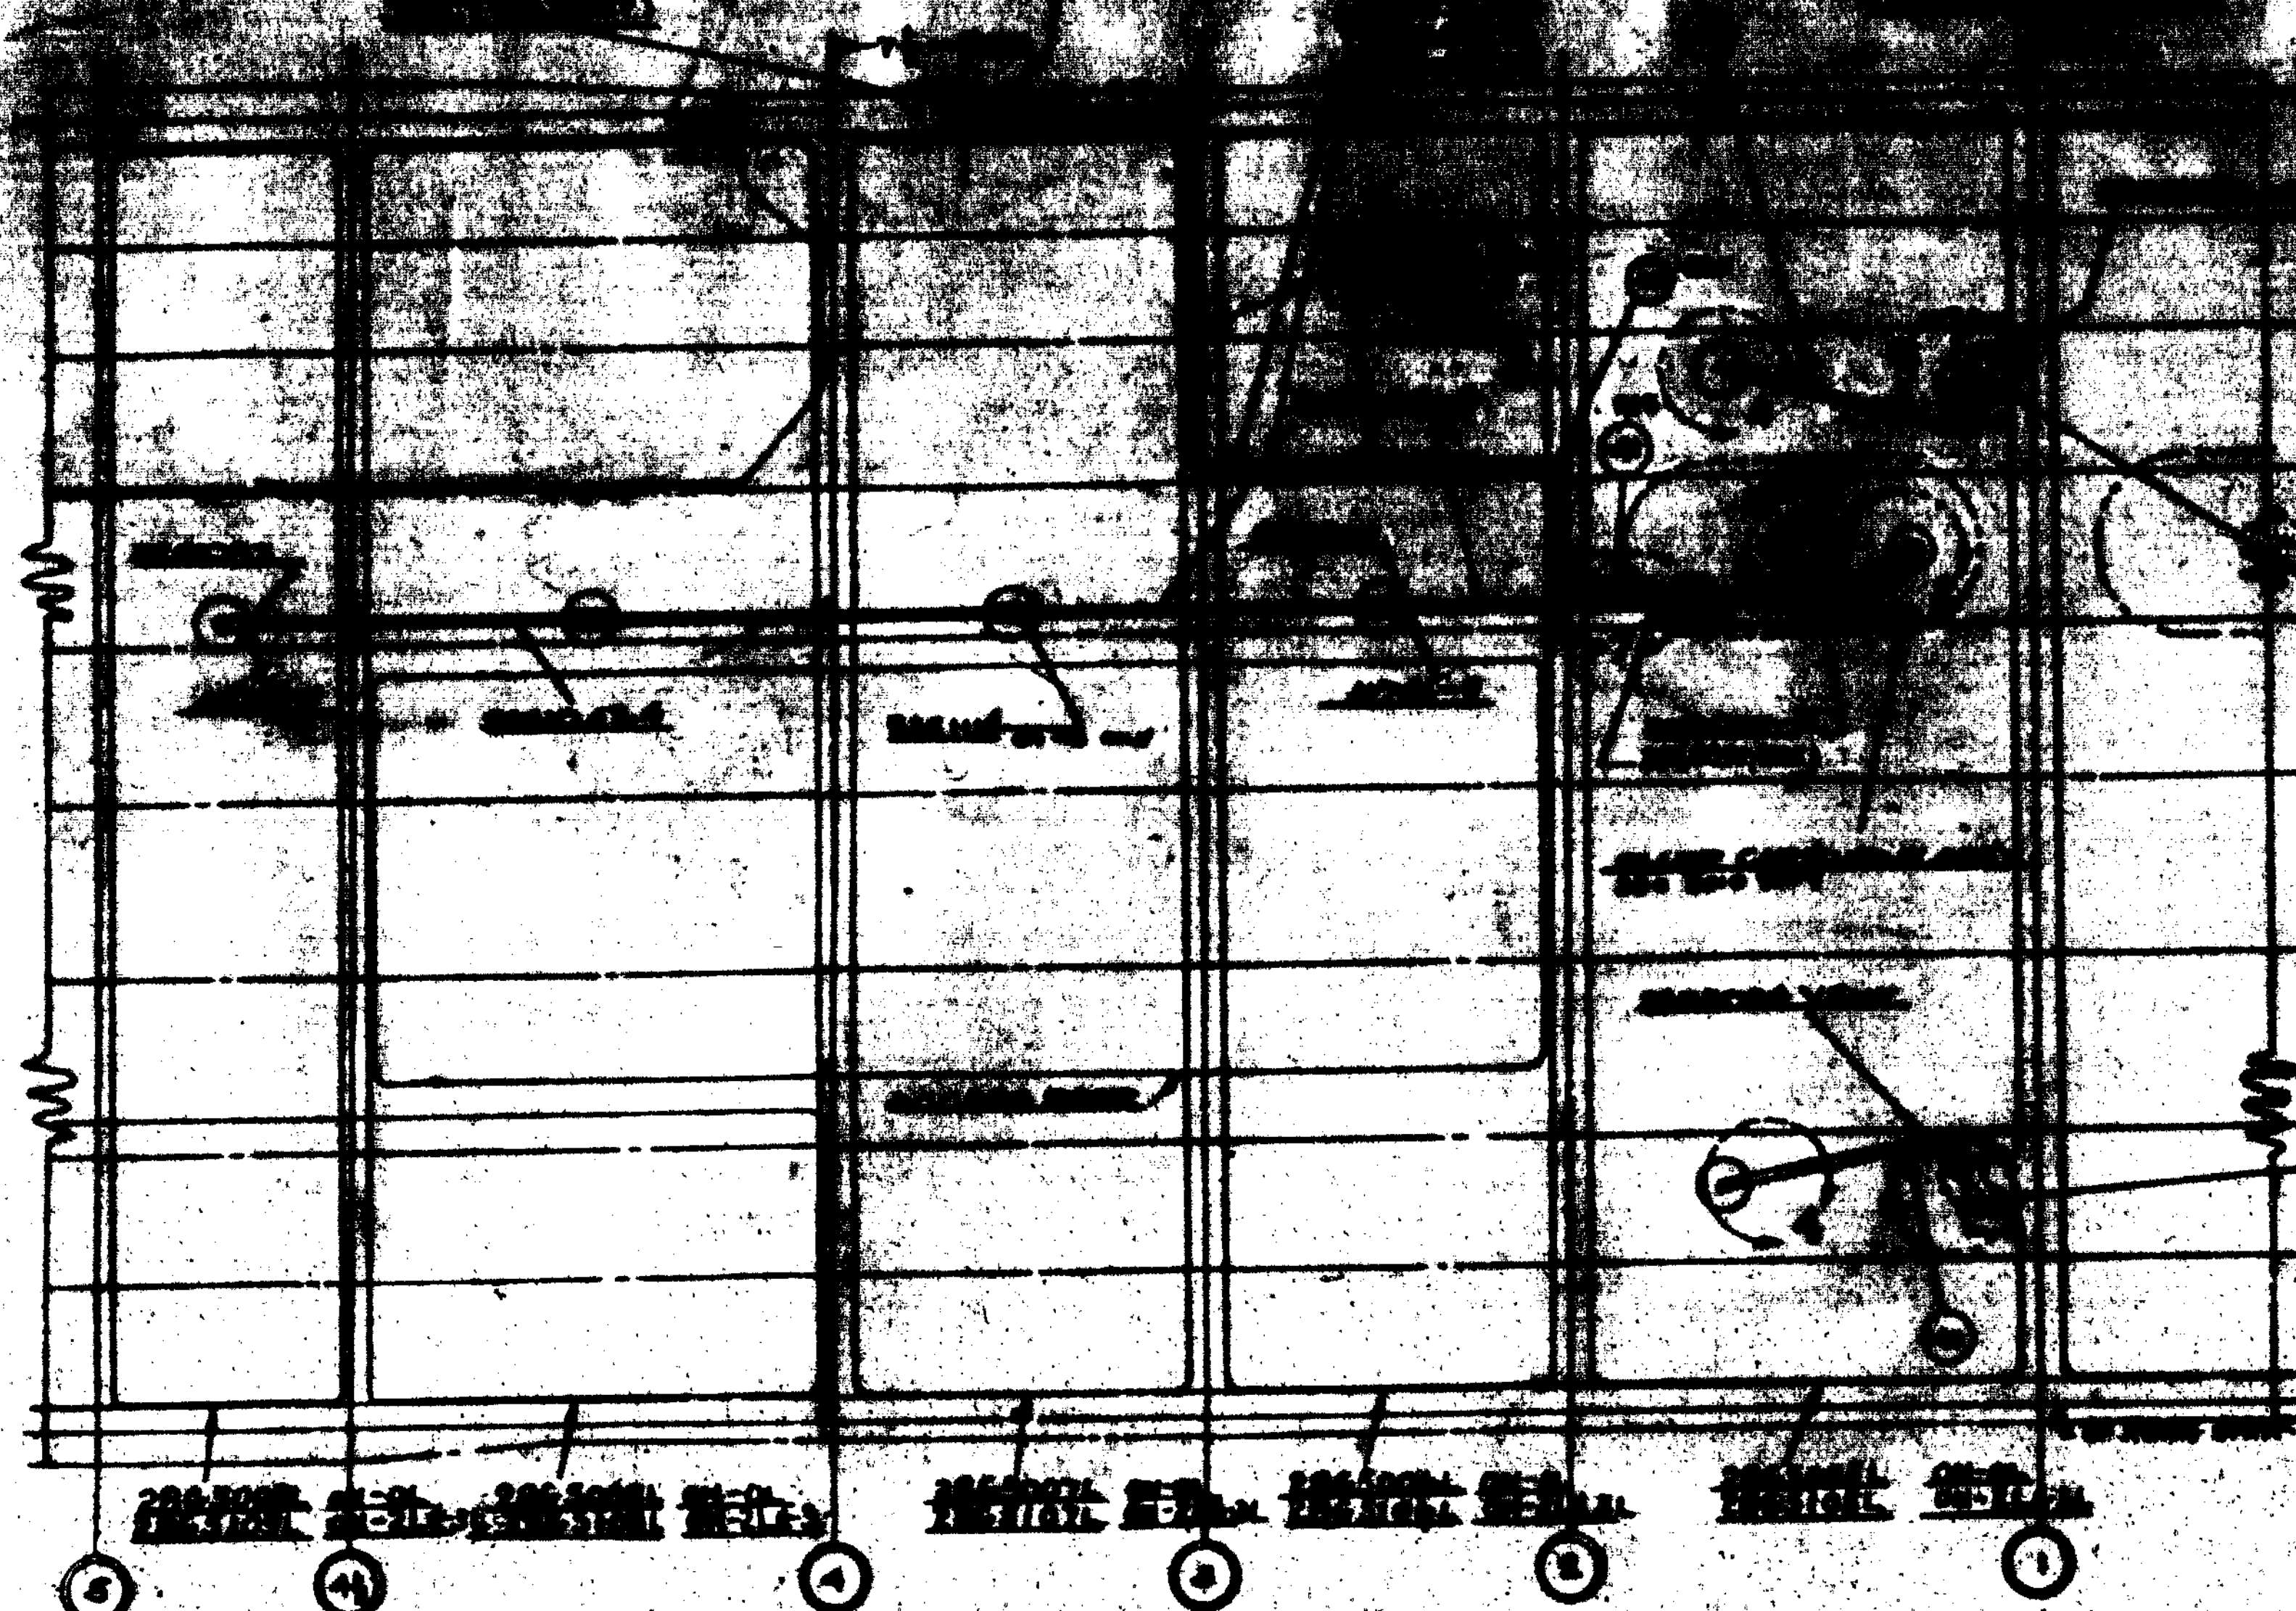


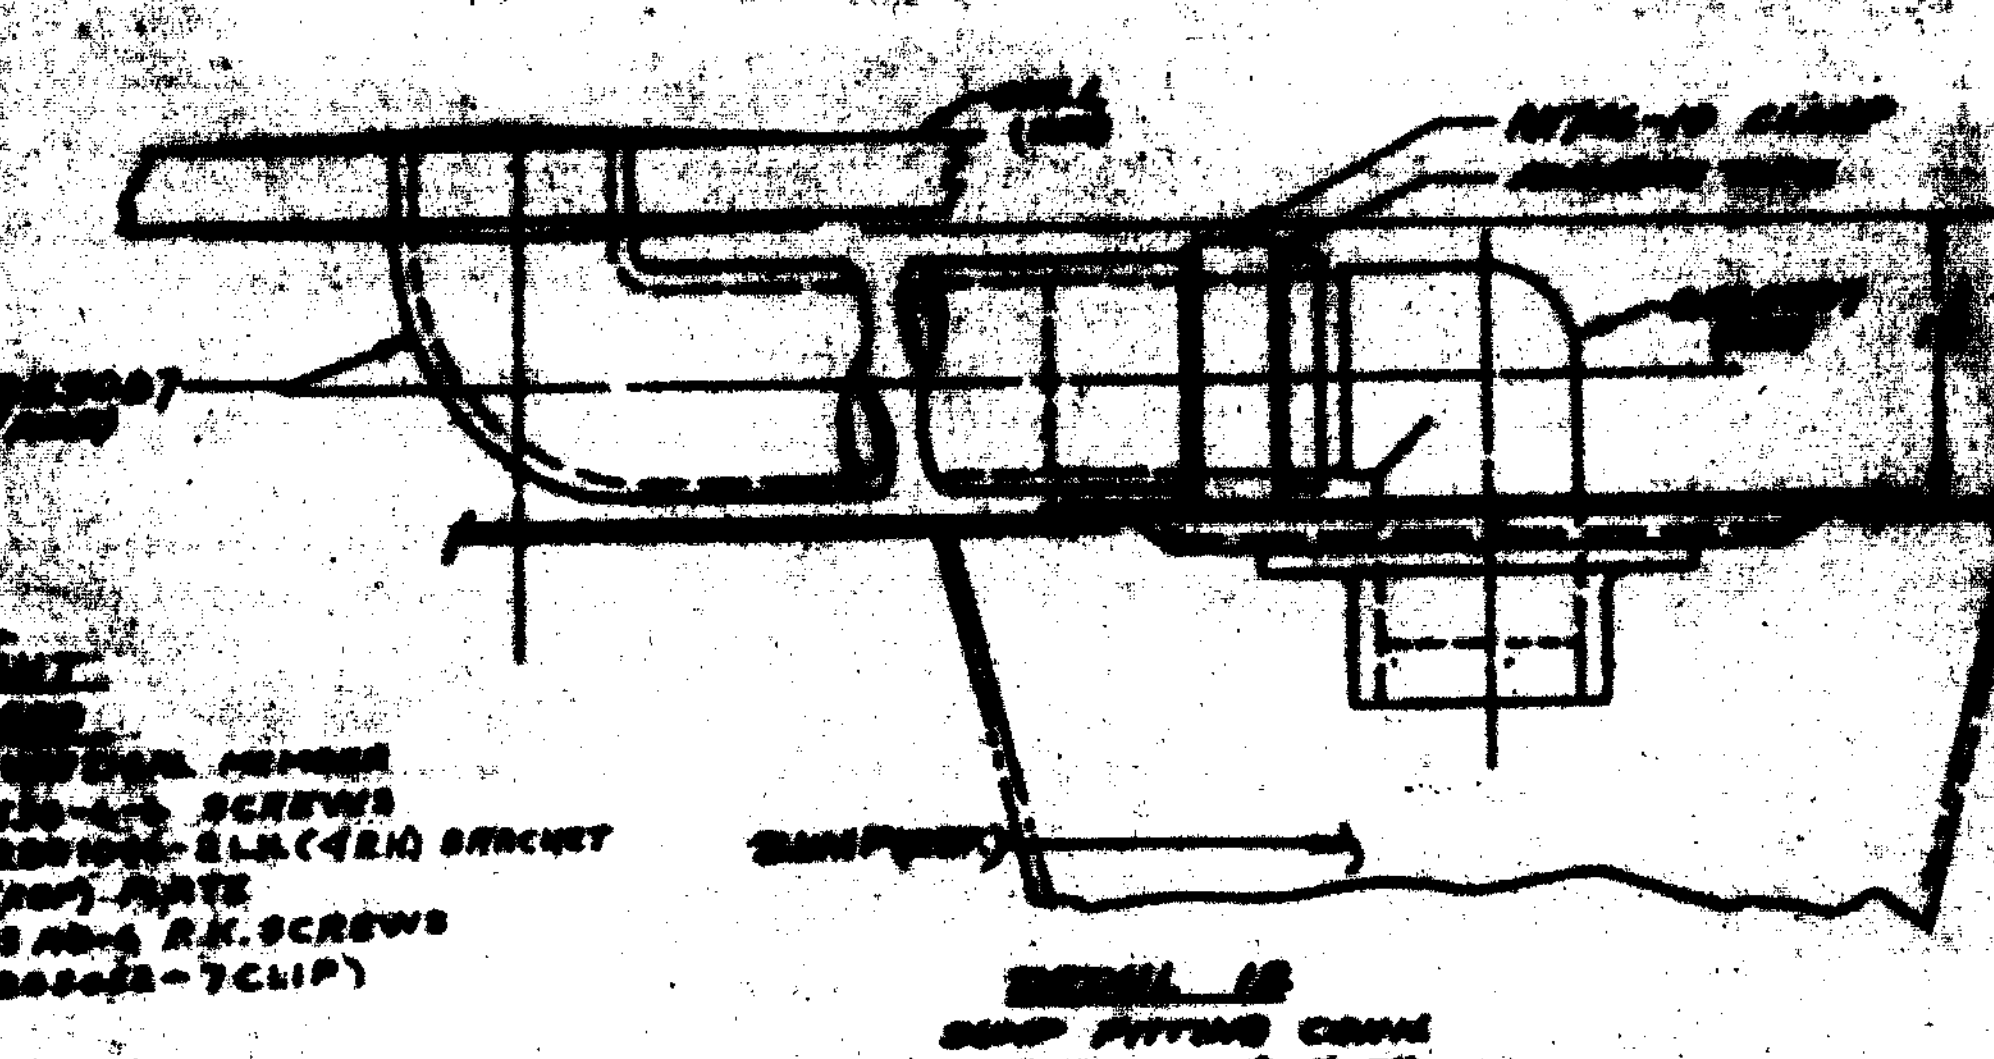

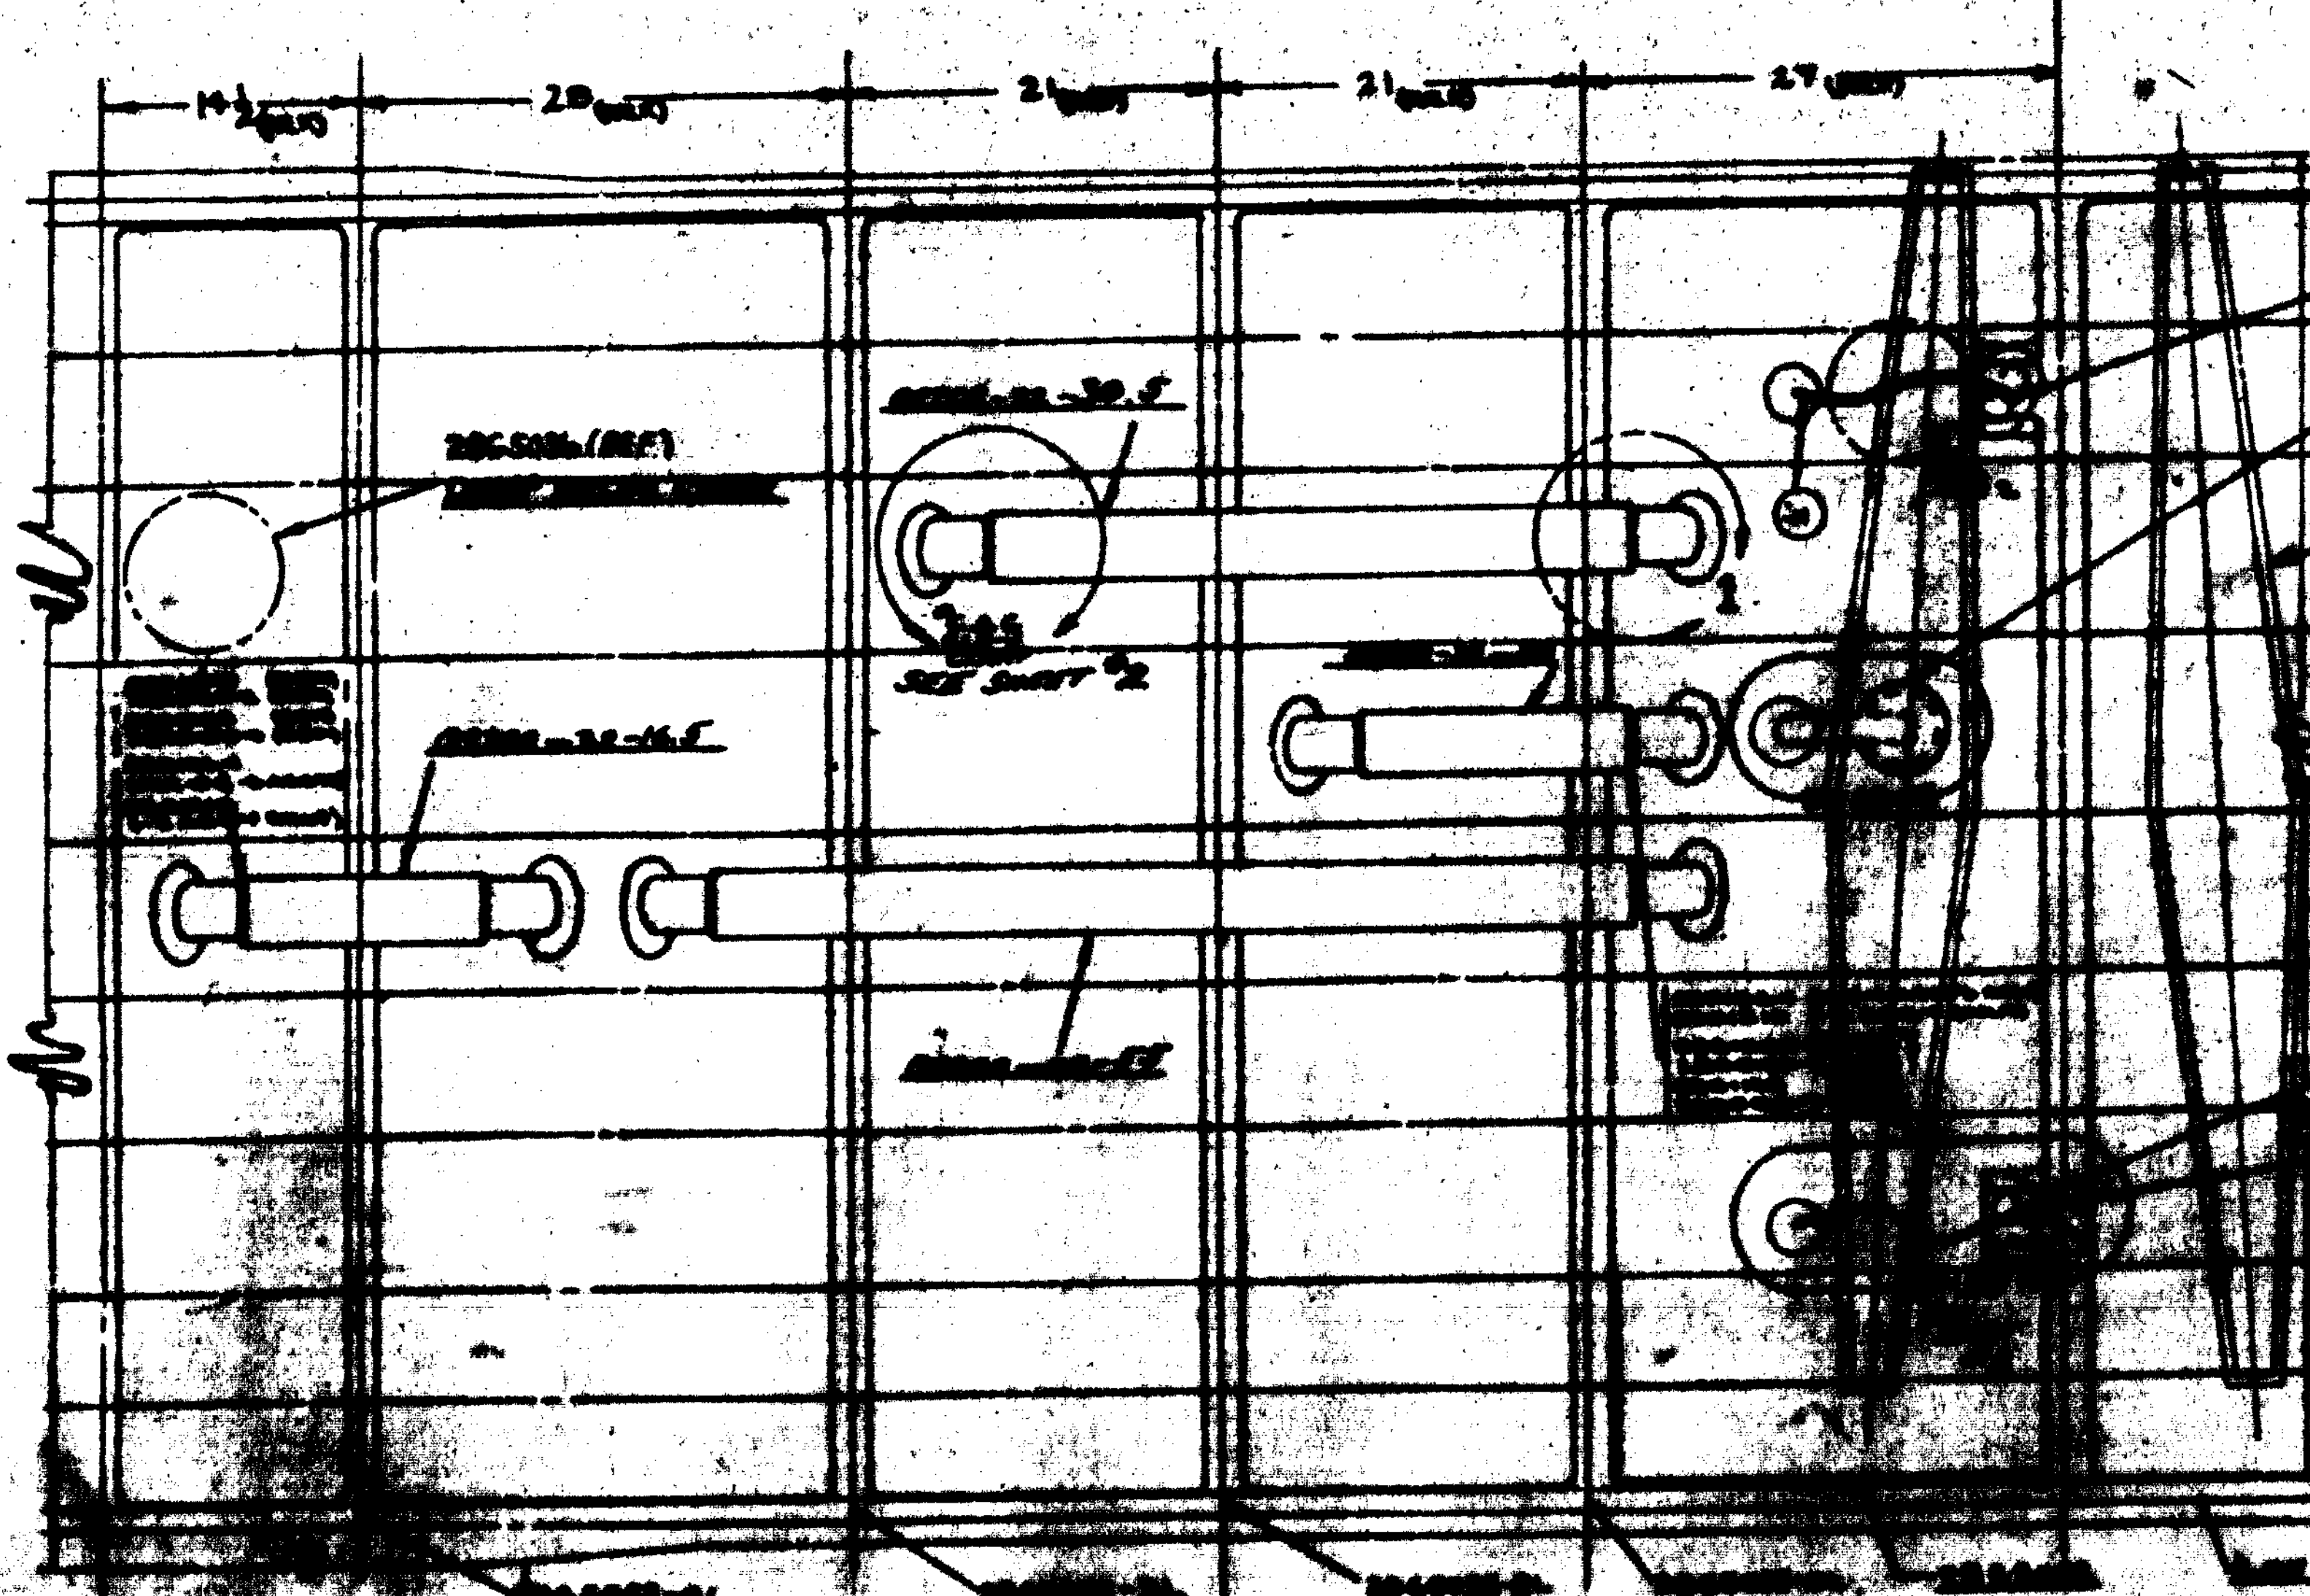

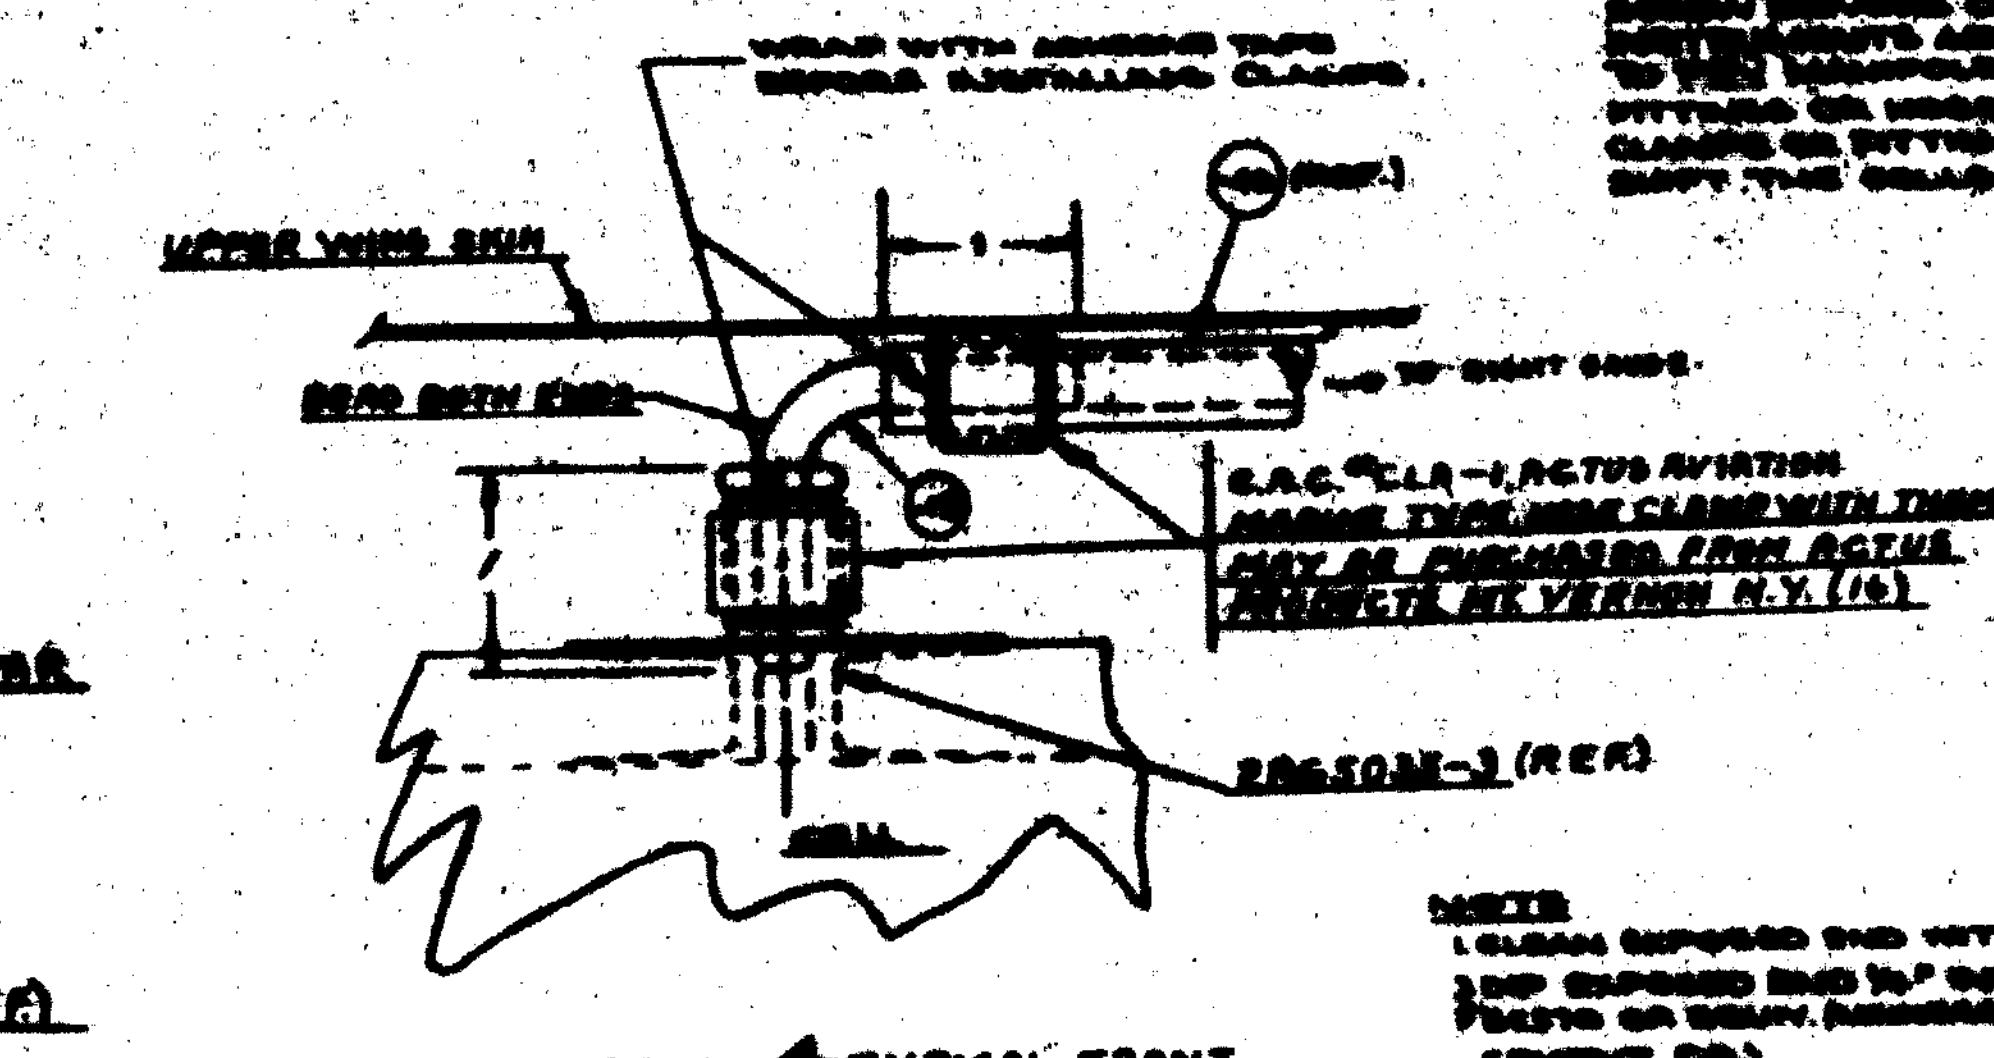


TRIM Q2808 SELF SEALING HOSE TO FIT ON ASSY. APPLY 2 COATS OF ... CEMENT ... ON ENDS OF HOSE ... BACK FROM ENDS. APPLY 3RD COAT TO ENDS OF HOSE AFTER ASSY.


VENT

NOTE–WRAP THREE TURNS OF ADHESIVE TAPE ...

DETAIL 2 VENT FITTING CONN.

NOTES:
ALL PARTS ON THIS DWG. TO BE INSTALLED WITH CELLS.

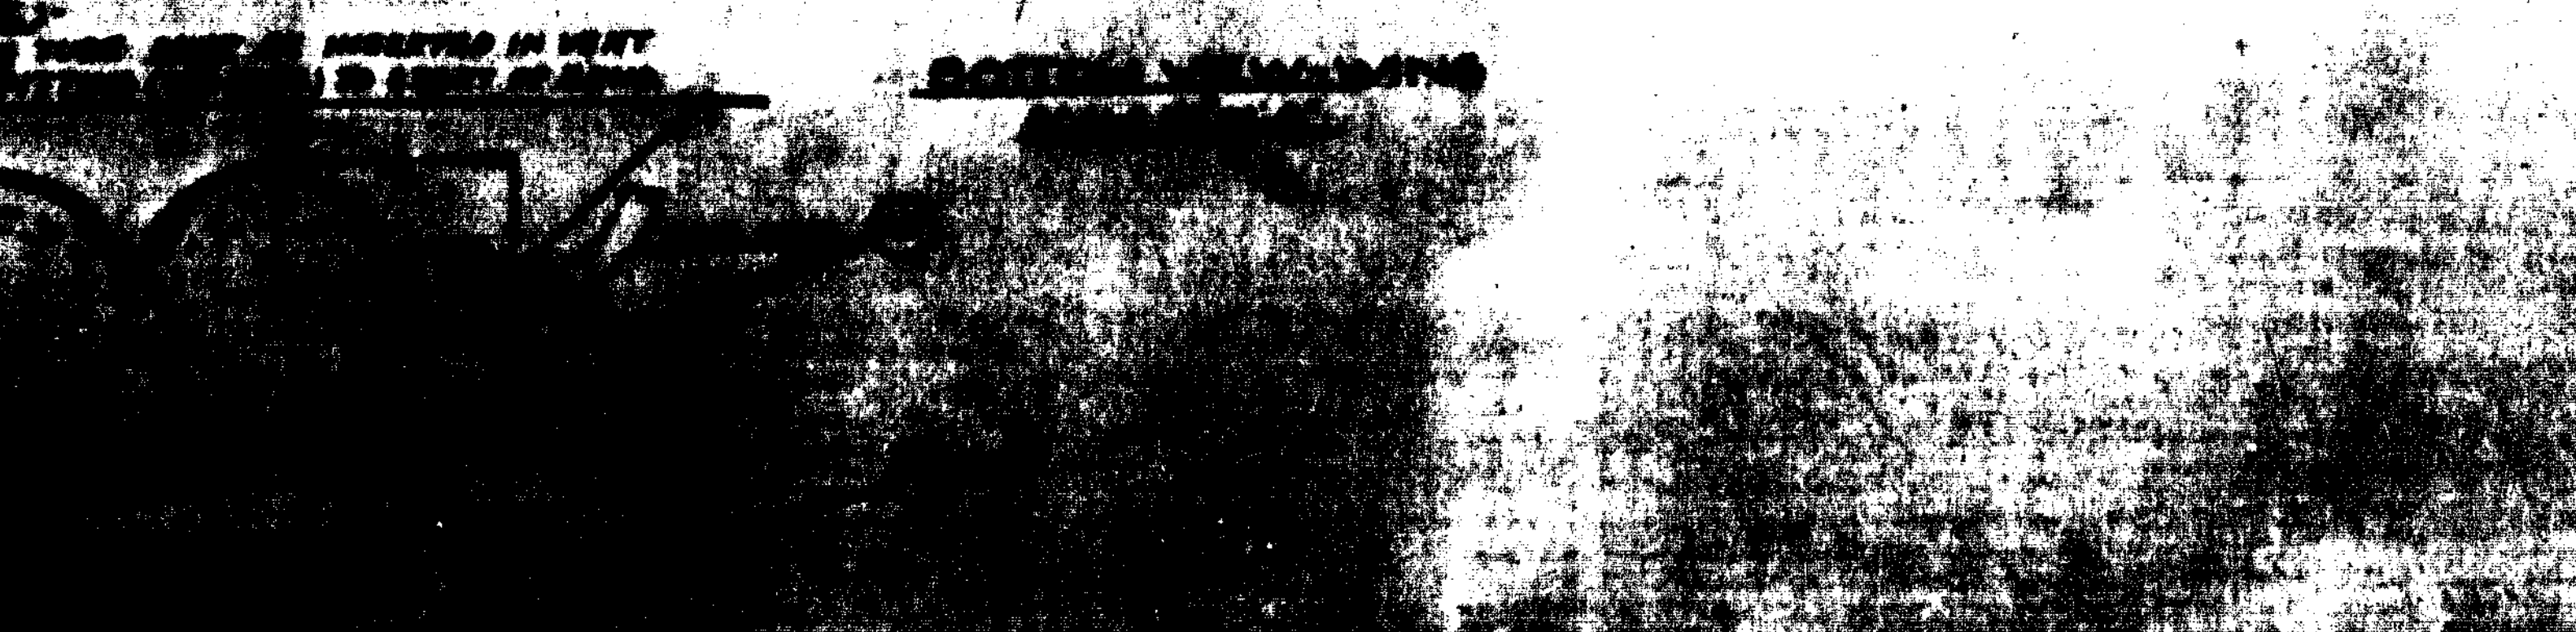

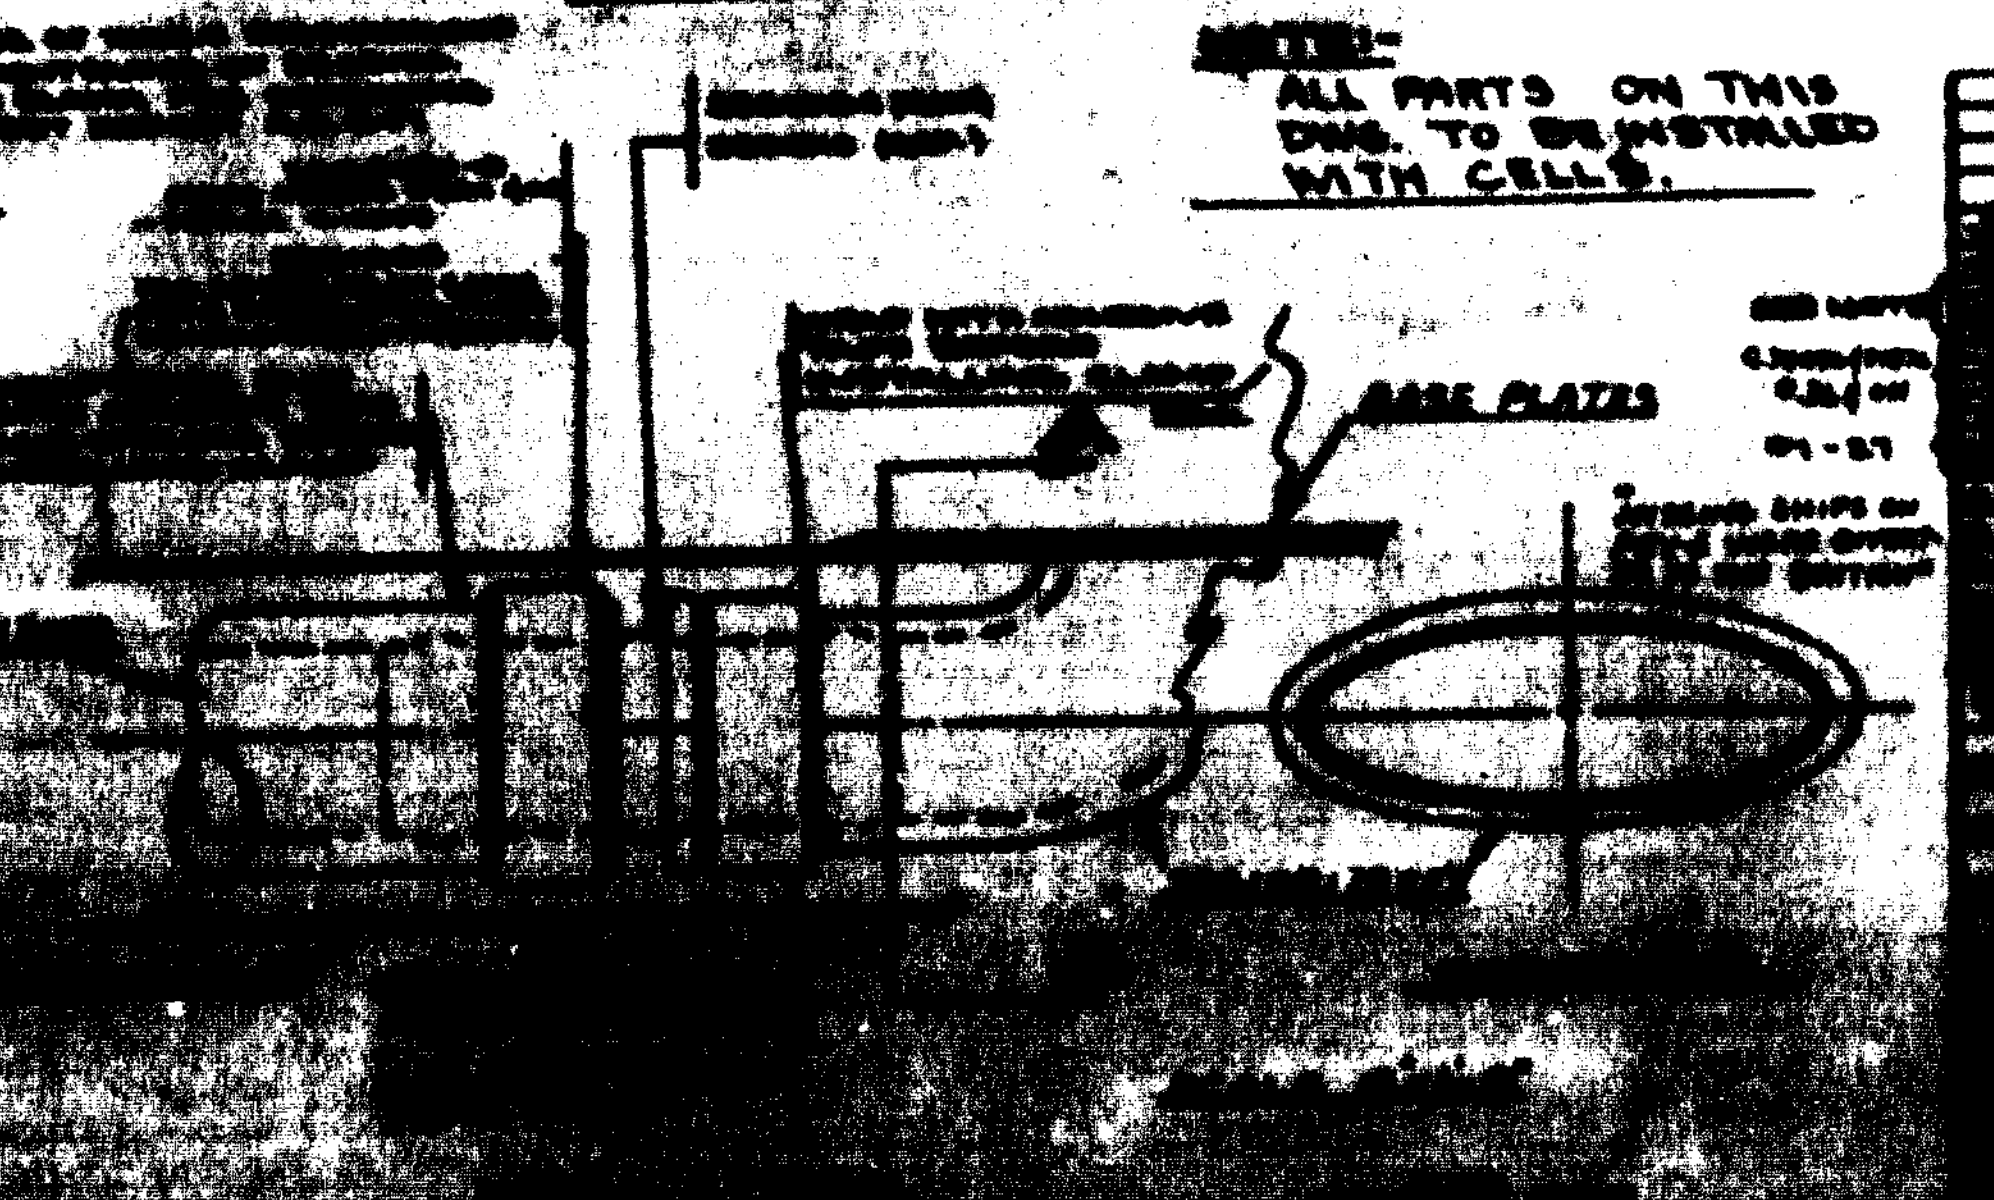

H 439